



Congratulations on your purchase of an Arnott® air suspension product. We at Arnott Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

"Engineered to Ride, Built to Last®"





WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com.

(In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

1 | K-3063 REV 1 07/12/2018





GENERAL INFORMATION:

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at www.arnottinc.com.

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

ELECTRONIC BYPASS MODULE INSTALLATION

1. DISASSEMBLE THE PROPER TRUNK COMPARTMENTS TO EXPOSE THE ACTIVE DAMPING MODULE. (FIGURES 1, 2, 3, 4, 5)



FIGURE 1



FIGURE 2

2 | K-3063 REV 1 07/12/2018









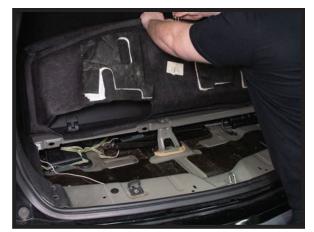


FIGURE 4

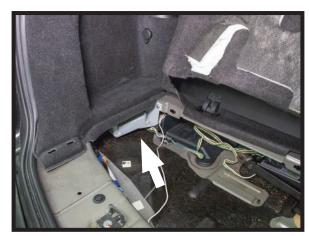


FIGURE 5

2. REMOVE THE THREE SCREWS FROM THE ACTIVE DAMPING MODULE AND DETACH. (FIGURES 6, 7)



FIGURE 6



FIGURE 7

3 K-3063 REV 1 07/12/2018





3. DISCONNECT THE ELECTRICAL CONNECTIONS FROM THE ACTIVE DAMPING MODULE. (FIGURE 8)



FIGURE 8

4. CAREFULLY EXPOSE THE WIRE LOOM AND SPLICE THE EBM ONTO THE EXISTING WIRE HARNESS, FOLLOWING THE DIAGRAM BELOW. (FIGURES 9, 10)







FIGURE 10

5. CONNECT THE EBM TO THE APPROPRIATE SPLICE CONNECTORS AS INDICATED BELOW. (FIGURES 11, 12, 13)

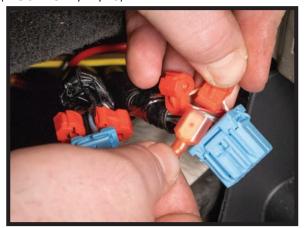


FIGURE 11

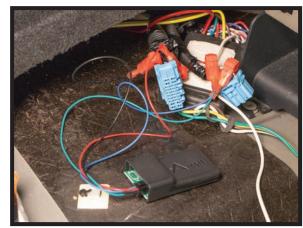


FIGURE 12

4 K-3063 REV 1 07/12/2018





ELECTRONIC BYPASS
MODULE

FROM	TO (PIN)
BLACK	BLACK (A18)
RED	BROWN/RED (A8)
BLUE	YELLOW/BROWN (B1)
GREEN	YELLOW/BLACK (B8)

VEHICLE'S WIRING HARNESS

FIGURE 13

6. REINSTALL THE ACTIVE DAMPENING MODULE AND SECURE USING THE THREE SCREWS. TIGHTEN TO MANUFACTURER'S SPECIFICATIONS. (FIGURE 14)



FIGURE 14

- 7. REINSTALL THE TRUNK COMPARTMENT COVERS.
- 8. EBM INSTALLATION COMPLETE.

NOTE:DO NOT PLUG THE FACTORY WIRING HARNESS BACK INTO THE VEHICLES AIR SUSPENSION CONTROL MODULE.

5 K-3063 REV 1 07/12/2018