

Congratulations on your purchase of an Arnett[®] air suspension product. We at Arnett Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

"Engineered to Ride, Built to Last[®]"



WARNING: *The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.*

Arnett[®] is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

GENERAL INFORMATION:

Reading this manual signifies your agreement to the terms of the general release, waiver of liability, and hold harmless agreement, the full text of which is available at www.arnottinc.com.

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owners manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

EBM INSTALLATION

1. LOCATE THE ACCESS PANEL IN THE RIGHT SIDE OF THE LUGGAGE COMPARTMENT. (FIGURE 1, 2)



FIGURE 1



FIGURE 2

2. REMOVE THE (3) SCREWS HOLDING THE FUSE PANEL IN PLACE TO ACCESS THE REVERSE SIDE. (FIGURE 3)

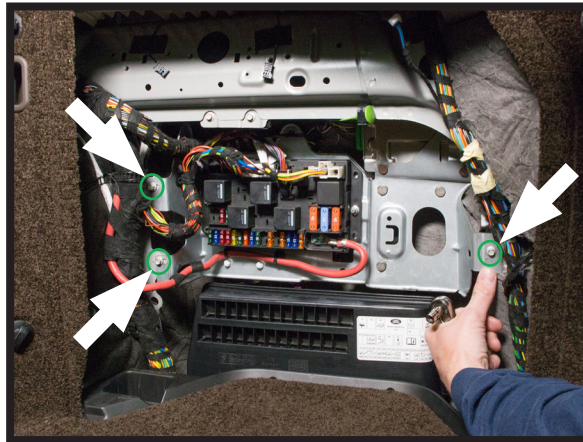


FIGURE 3

3. LOCATE THE AIR SUSPENSION CONTROL MODULE BEHIND THE FUSE PANEL. MAKE NOTE OF THE BLACK 20-PIN CONNECTOR. (FIGURES 4, 5)

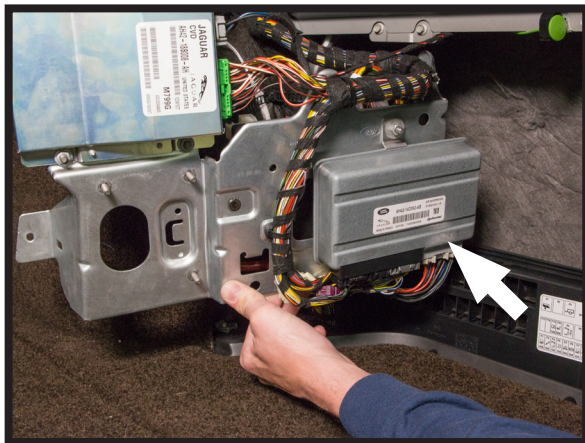


FIGURE 4

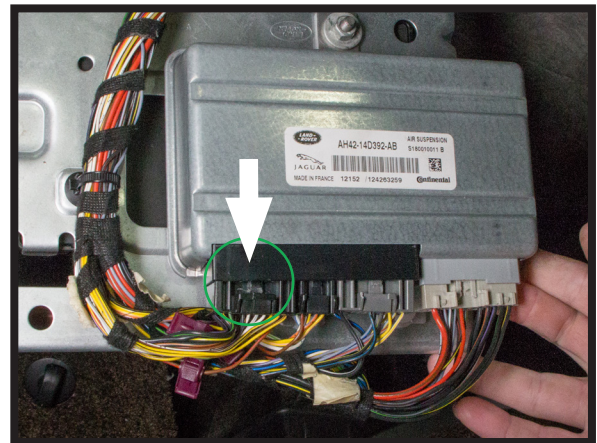


FIGURE 5

4. DISCONNECT THE AIR SUSPENSION CONTROL MODULE. (FIGURE 6)



FIGURE 6

5. LOCATE SUITABLE GROUND AND INSTALL BLACK WIRE FROM EBM. (FIGURE 7)

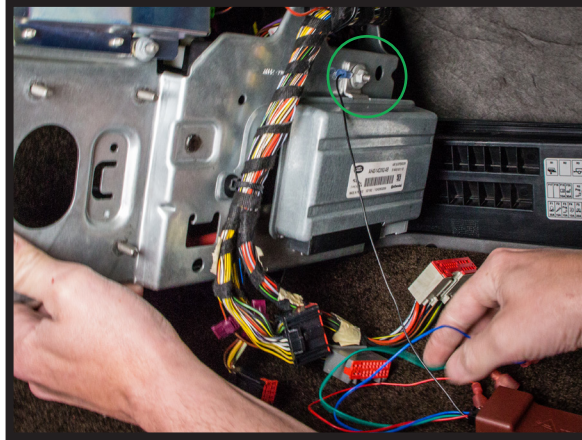


FIGURE 7

6. INSTALL EACH 3-WAY WIRE SPLICE ON THE BLACK 20-PIN CONNECTOR. SEE DIAGRAM BELOW. (FIGURES 8, 9)

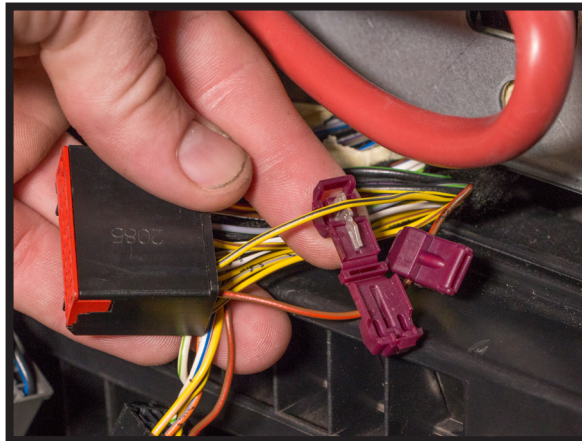


FIGURE 8

ELECTRONIC BYPASS MODULE	FROM	TO (PIN)	VEHICLE'S WIRING HARNESS
	BLACK	SEE STEP 5	
	RED	BROWN/RED (20)	
	BLUE	YELLOW/BROWN (16)	
	GREEN	YELLOW/BLACK (19)	

FIGURE 9

NOTE:

DO NOT PLUG THE FACTORY WIRING HARNESS BACK INTO THE VEHICLE'S AIR SUSPENSION CONTROL MODULE.

7. SECURE IN SUITABLE LOCATION. (FIGURE 10)

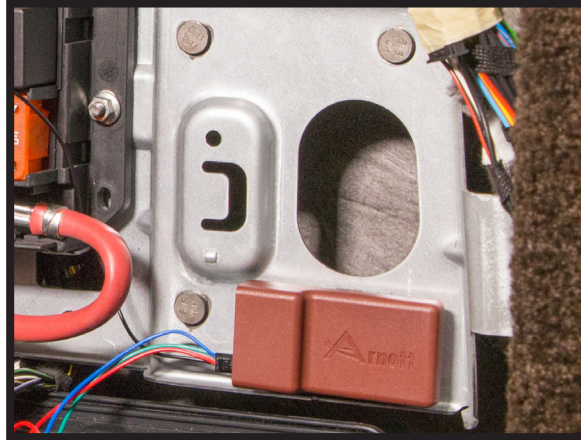


FIGURE 10

8. REINSTALL FUSE PANEL AND ACCESS COVER PRIOR TO RECONNECTION OF THE BATTERY.
9. INSTALLATION COMPLETE.