

# Technical Service Bulletin

## Electronic Stabilizer Bar Installation Notices



### NOTICE



#### DRS CLEANLINESS CAUTION

Dynamic Response System (DRS) components are manufactured to precise tolerances. Keep all work areas and components clean, and immediately install blanking plugs in any open lines or orifices to prevent foreign matter ingress and system damage.

#### SYSTEM BLEEDING REQUIRED

After installation, you must bleed the DR system according to the manufacturer's instructions to eliminate any air that enters the system when opened. Scan the QR below to view 11-TSB-DRS-Bleeding.



# Arnott®

## Suspension Products

### Arnott US Business Office:

[www.arnottsuspension.com](http://www.arnottsuspension.com)

100 Sea Ray Drive  
Merritt Island, FL 32953

**Call:** 800.251.8993

321.868.3016

**Fax:** 321.868.3703

**Email:** [techassistance@arnottinc.com](mailto:techassistance@arnottinc.com)

### Arnott Europe Business Office:

[www.arnotteurope.com](http://www.arnotteurope.com)

Industrieweg 19  
5145 PD, Waalwijk (NL)

**NL Phone:** +31 73 7850 580

**DE Phone:** +31 85 2087 438

 
**UK Phone:** +44 203 3186 124

**BE Phone:** +32 258 846 90


**ES Phone:** +34 91 901 10 56

**FR Phone:** +32 78 48 46 93


**Email:** [info@arnotteurope.com](mailto:info@arnotteurope.com)

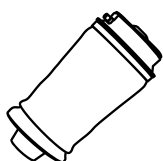


Air Springs

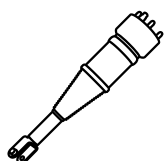 


Struts

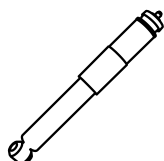 


Shocks

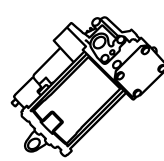 


Compressors

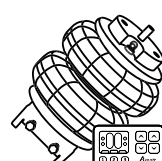 


LCV Air Helper  
Spring Kits

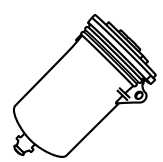 


Dryers

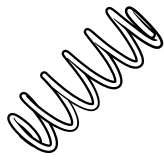 


Coil Spring  
Conversion Kits

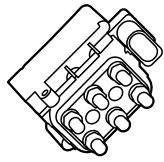 

Valve Blocks

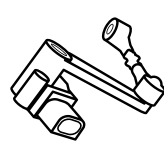 

Ride Height  
Sensors

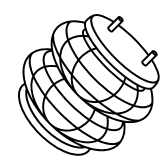 

Pickup Truck Air  
Helper Springs