

Remove the shipping plug.



Install the air fitting, only until seated.
Do NOT overtighten.

