
This product ships pressurized; prior to installation please ensure it is properly inflated by pressing on the exposed portion of the air spring. The air spring should be firm and resemble the image below. If the air spring is not inflated or does not resemble the image below, please contact your authorized retailer.



Do not remove the check valve.

Remove threaded plug and discard.

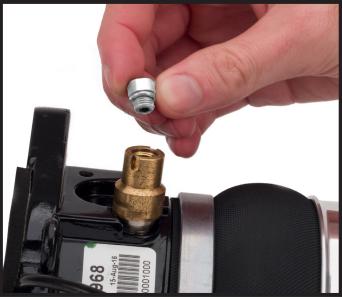




<u>Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product,</u> please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

1

**REV 03** 

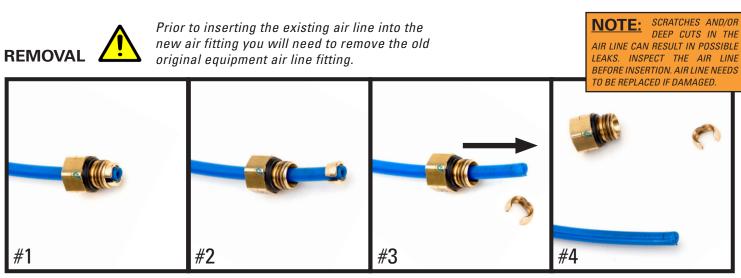

OE AIR LINE FITTING

SLIDE THE THREADED PORTION UP THE LINE AND SPREAD THE COLLET OPEN TO REMOVE

SLIDE THE AIR FITTING OFF OF THE AIR LINE

AIR LINE IS READY FOR INSTALLATION

## **INSTALLATION - USING THE NEW AIR LINE FITTING PROVIDED IN THE KIT**



THREAD THE INCLUDED AIR LINE FITTING INTO THE VALVE




TIGHTEN FITTING TO APPROX. 2NM (18 IN-LBS/1.5 FT-LBS)



REMOVE AND DISPOSE OF THE SHIPPING PIN



INSERT AIR LINE INTO THE AIR LINE FITTING UNTIL IT STOPS

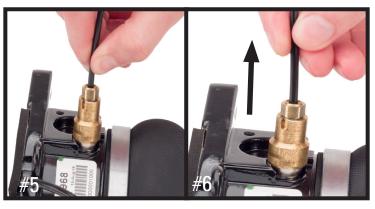

AIR LINE INSERTED

GENTLY PULL ON AIR LINE TO CONFIRM IT IS FULLY SECURED BY THE AIR LINE FITTING

Arnott<sup>®</sup> is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling <u>800-251-8993</u> during normal business hours or email <u>techassistance@arnottinc.com</u>. (In the EU please call +31 (0)73 7850 580 or email <u>info@arnotteurope.com</u>)

2

**REV 03** 

05/30/2019