

TECHNICAL SERVICE BULLETINS, OR TSBs FOR SHORT, ARE NOTIFICATIONS MADE DIRECTLY BY MANUFACTURERS TO HELP AUTOMOTIVE TECHNICIANS DIAGNOSE AND REPAIR COMMONLY REPORTED PROBLEMS. A TSB IS ISSUED BY ARNOTT WHEN THERE IS A GROWING TREND WITH AN UNANTICIPATED ISSUE THAT INSTALLERS NEED TO BE MADE AWARE OF. ARNOTT TECHNICAL SERVICE BULLETINS ARE RECOMMENDED STEPS AND PROCEDURES FOR SPECIFIC PARTS AND OR COMPONENTS THAT SHOULD BE FOLLOWED TO AVOID INSTALLATION PROBLEMS.

ELECTRONIC SUSPENSION RESISTOR REMOVAL

1. LOCATE AND UNLOCK THE ELECTRICAL CONNECTOR FROM THE ELECTRONIC SUSPENSION RESISTOR. (FIGURES 1, 2)

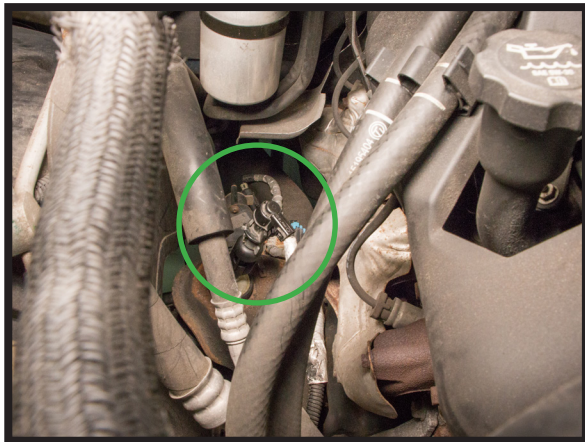


FIGURE 1



FIGURE 2

2. ONCE UNLOCKED, UNPLUG FROM ELECTRONIC SUSPENSION RESISTOR. (FIGURES 3, 4)



FIGURE 3

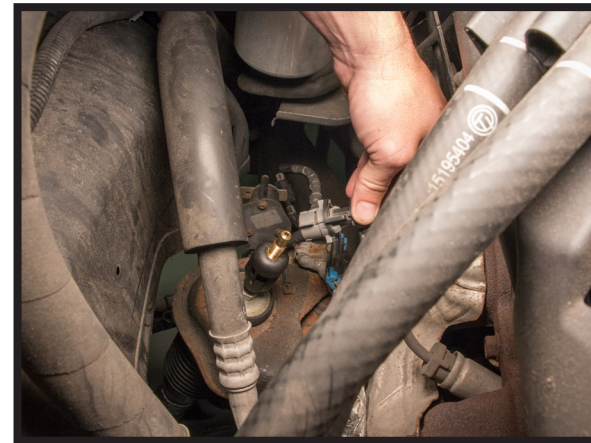


FIGURE 4

Arnett® is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

3. LOOSEN AND REMOVE THE ELETRONIC SUSPENSION RESISTOR FROM SHOCK ROD. (FIGURES 5, 6)



FIGURE 5

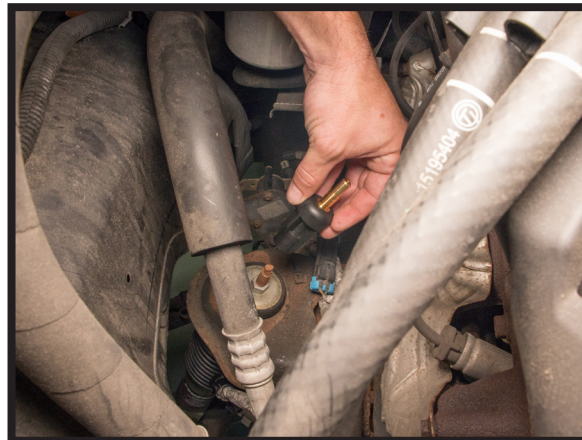


FIGURE 6

ELECTRONIC SUSPENSION RESISTOR INSTALLATION

1. INSTALLATION IS IN REVERSE ORDER USING THE SUPPLIED HARDWARE.

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)