

TECHNICAL SERVICE BULLETINS, OR TSBs FOR SHORT, ARE NOTIFICATIONS MADE DIRECTLY BY MANUFACTURERS TO HELP AUTOMOTIVE TECHNICIANS DIAGNOSE AND REPAIR COMMONLY REPORTED PROBLEMS. A TSB IS ISSUED BY ARNOTT WHEN THERE IS A GROWING TREND WITH AN UNANTICIPATED ISSUE THAT INSTALLERS NEED TO BE MADE AWARE OF. ARNOTT TECHNICAL SERVICE BULLETINS ARE RECOMMENDED STEPS AND PROCEDURES FOR SPECIFIC PARTS AND OR COMPONENTS THAT SHOULD BE FOLLOWED TO AVOID INSTALLATION PROBLEMS.

WARRANTY COIL REMOVAL

1. REFERENCE ARNOTT INSTALLATION MANUAL AS-2761 FOR STEPS REGARDING REMOVAL OF THE STRUT FROM YOUR VEHICLE.
2. ON A WORKBENCH, REMOVE THE PROTECTIVE BOOT TO EXPOSE THE INTERNAL SNAP RING. (FIGURES 1, 2)



FIGURE 1



FIGURE 2

3. LOCATE AND REMOVE THE INTERNAL SNAP RING. (FIGURES 3, 4)

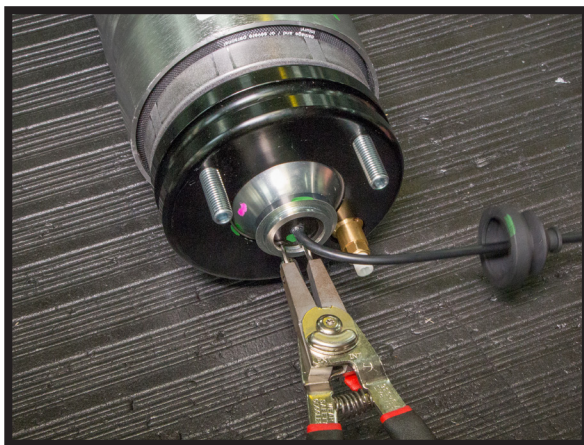


FIGURE 3

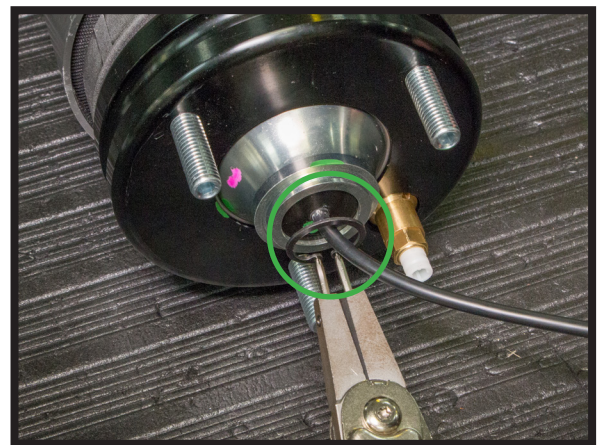


FIGURE 4

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)

4. REMOVE THE COIL FROM THE STRUT. (FIGURES 5, 6)



FIGURE 5



FIGURE 6

WARRANTY COIL INSTALLATION

1. INSTALLATION IS IN REVERSE ORDER OF REMOVAL UTILIZING THE SUPPLIED HARDWARE.

Arnott® is committed to the quality of its products. If you have a question or problem with any Arnott product, please contact Arnott by calling 800-251-8993 during normal business hours or email techassistance@arnottinc.com. (In the EU please call +31 (0)73 7850 580 or email info@arnotteurope.com)