

ATTENTION



INSTALLATION OF THIS AIR SUSPENSION COMPRESSOR REQUIRES THE REPLACEMENT OF THE COMPRESSOR RELAY.

FAILURE TO REPLACE THE OE RELAY WITH THE UNIT PROVIDED IN THIS KIT CAN CAUSE DAMAGE AND/OR VOID WARRANTY.

PLEASE REFER TO YOUR VEHICLES SHOP MANUAL OR CONSULT YOUR LOCAL DEALERSHIP FOR ADDITIONAL INFORMATION AND PROPER PROCEDURES FOR REPLACING YOUR AIR SUSPENSION COMPRESSOR RELAY.

P-2134/P-3297




01-05 AUDI ALLROAD QUATTRO (C5)
Relay located on the left side of the vehicle under the dashboard.

P-2291/P-3299/P-3305



04-09 JAGUAR XJ SERIES (X350/358)
Relay located on the right side of the vehicle in the engine compartment.

P-2192/P-3296

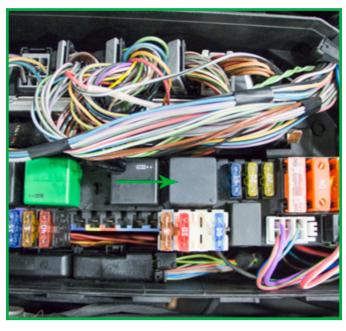


00-06 MERCEDES-BENZ S-CLASS
Relay located on the right side of the vehicle in the engine compartment.




02-09 MERCEDES-BENZ E-CLASS
Relay located on the left side of the vehicle by the firewall.

P-2539/P-2599

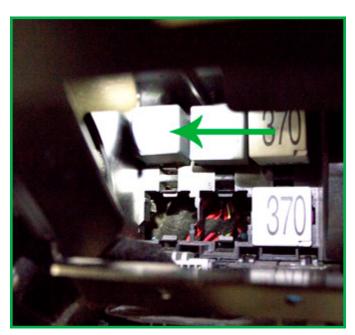

04-10 AUDI A8 QUATTRO (D3)Relay located on the left side of the vehicle under the dashboard.

P-2984/P-3302/P-3317

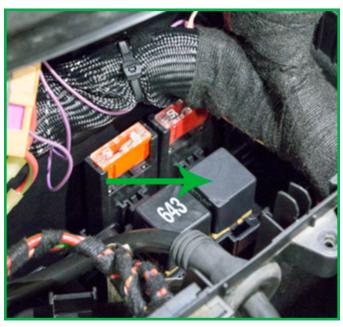


05-11 AUDI A6 (C6)Relay located on the left side of the vehicle under the wiper cowl.

P-2462




03-05 LAND ROVER RANGE ROVER (L322) Relay located on the rear right fuse box.

P-2494

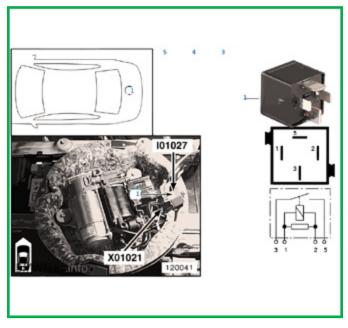


00-06 BMW X5 (E53, W/4-CORNER LEVELING)
Relay is mounted to the compressor.

P-2469

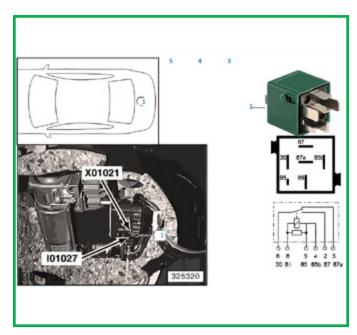

99-03 BMW 5 SERIES (E39) Relay is mounted to the compressor.

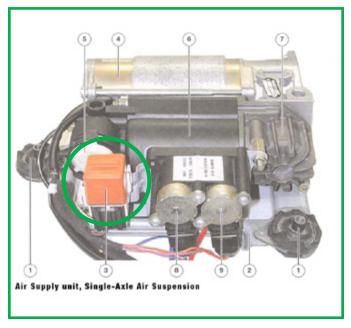


02-08 BMW 7 SERIES (E65,E66)Relay is mounted to the compressor.


P-2495



98-04 LAND ROVER DISCOVERY II (L318) Relay located within Underhood Fuse Block.

P-2496/P-3298/P-3304

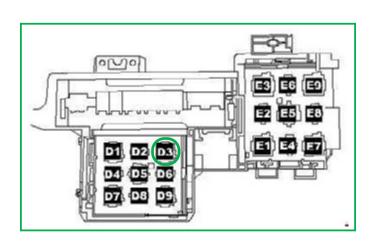


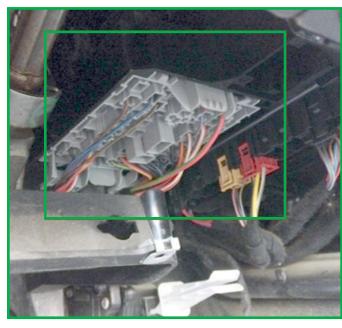


04-10 VOLKSWAGEN TOUAREG (7L)
Relay located under the drivers side dashboard.

4 11-21-8695 REV 01 May 10, 2023

P-2496/P-3298/P-3304

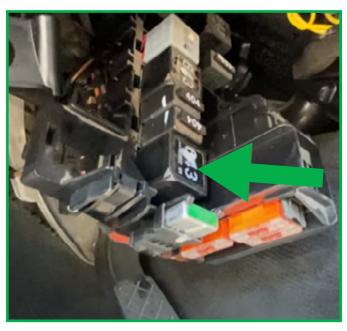

07-15 AUDI Q7 (4L)Relay located under the drivers side dashboard.

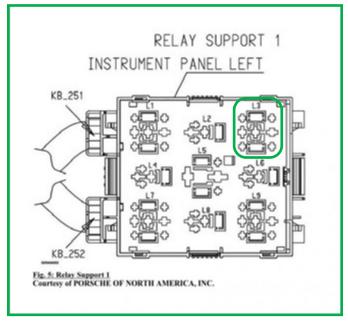


03-10 PORSCHE CAYENNE (9PA)Relay located under the drivers side dashboard (Position L3).

P-2740



03-19 BENTLEY CONTINENTAL GT/06-19 FLYING SPUR (D1)
Relay located in rear left of the trunk, above the battery.

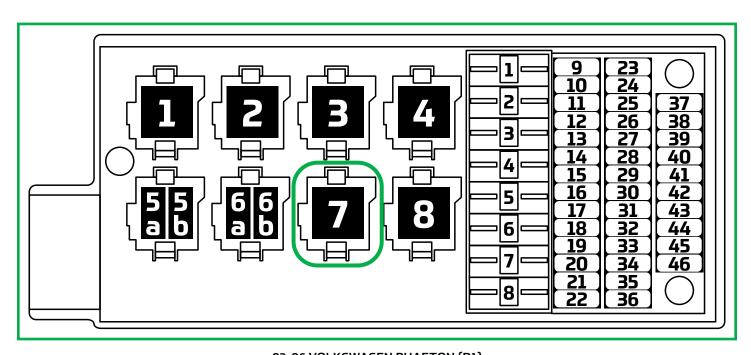

03-06 VOLKSWAGEN PHAETON (D1)
Relay located in luggage compartment on the left side.



Arnott US Business Office:

www.arnottinc.com

100 Sea Ray Drive Merritt Island, FL 32953

Call: 800.251.8993

321.868.3016

Fax: 321.868.3703

Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Docterskampstraat 1E/1F, 3 5222 AM 's-Hertogenbosch (NL)

NL Phone: +31 73 7850 580

DE Phone: +31 85 2087 438

UK Phone: +44 203 3186 124

BE Phone: +32 258 846 90

ES Phone: +34 91 901 10 56

FR Phone: +32 78 48 46 93

Email: info@arnotteurope.com



Air Springs



Struts



Shocks



Compressors



Dryers



Coil Spring Conversion Kits



Valve Blocks



Ride Height Sensors