Arnott™
Motorcycle Suspension

INSTALLATION MANUAL

K-2637 & K-2638
Pressure Gauge w/Toggle Switch
1980-Present Harley-Davidson® Touring Models

ELEVATE YOUR RIDE.®

1. The gauge comes as a complete assembly from the factory. Pressure gauge, bracket and toggle switch are all pre-assembled for your convenience. (Figure 1)

FIGURE 1

2. Use the existing 1/4" hole in the underside of the frame, in front of the battery box, to mount the pressure gauge. (Figure 2)

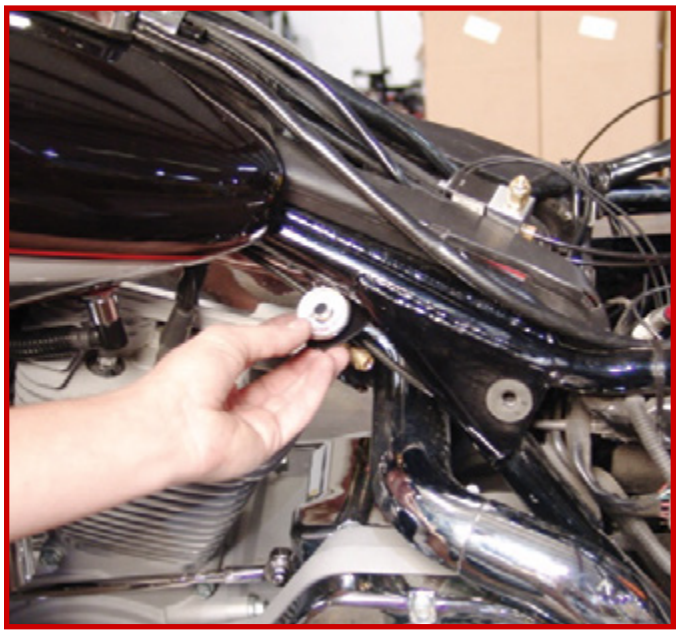

FIGURE 2

3. Use the 1/4" air line supplied in the kit and simply push it into the "push to connect" fitting that's already installed as part of the pressure gauge assembly. (Figure 3)

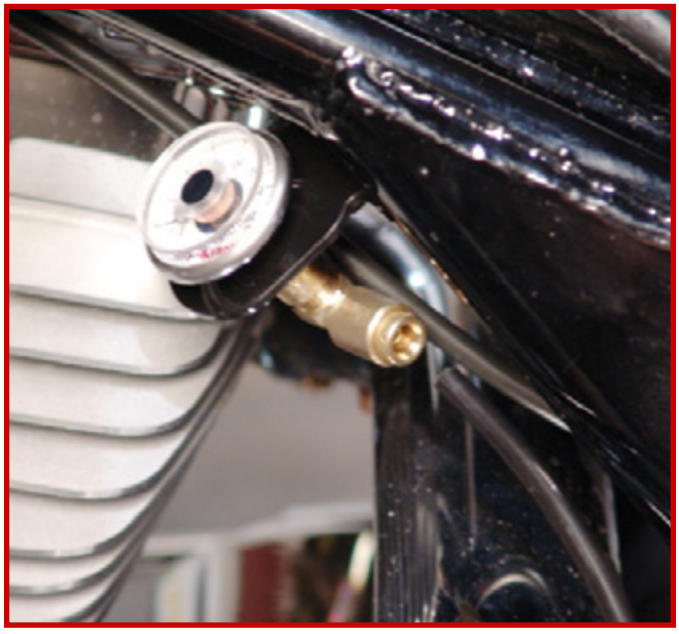

FIGURE 3

4. Route the ¼" line from the gauge, rearward through the large hole in the frame and connect to the distribution manifold. You will need to remove the plug and insert the fitting supplied in the kit. Cut the ¼" air line to length and connect. (Figure 4)

FIGURE 4

SCHEMATIC ON NEXT PAGE

COMPONENTS

PART NO.	DESCRIPTION	QTY
21-2932	GAUGE/BRACKET ASSEMBLY W/TOGGLE	1
29-2627	1/4” LINE	3 FT
29-2633	PUSH TO CONNECT FITTING	1

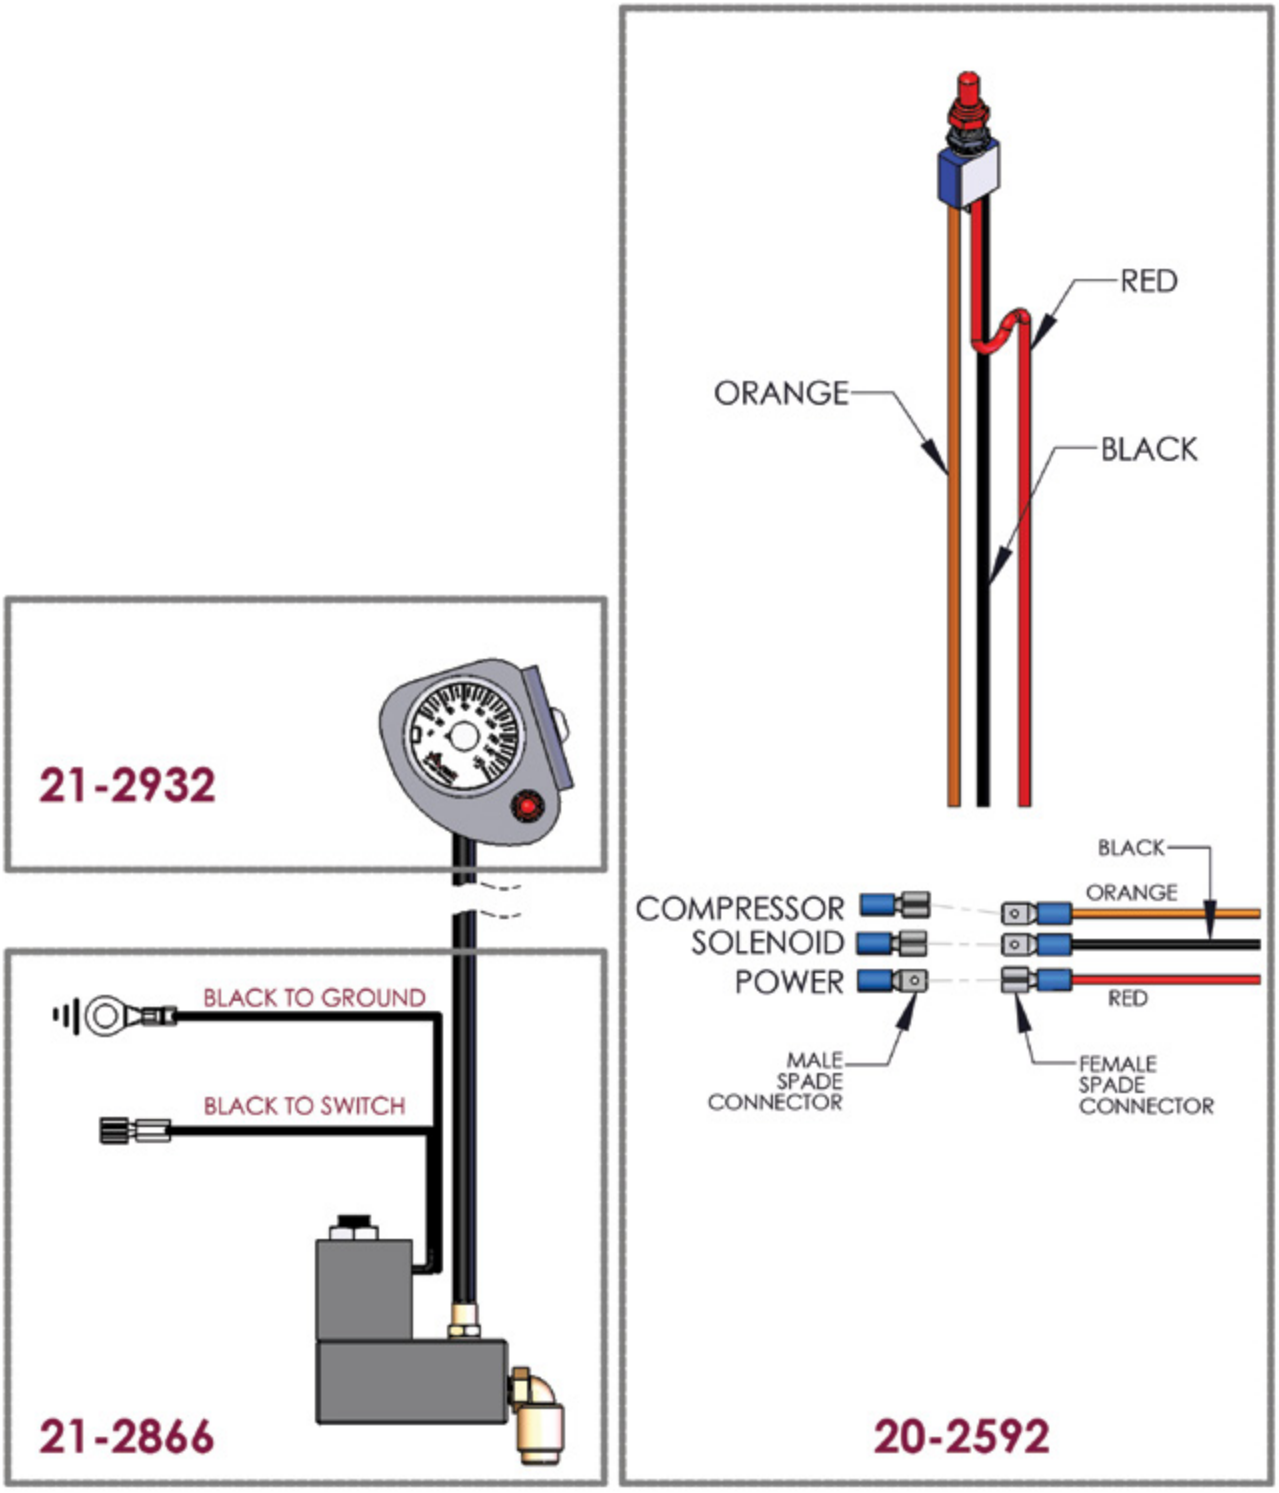

Arnott™

Motorcycle Suspension

Arnott US Business Office:

www.arnottinc.com

100 Sea Ray Drive
Merritt Island, FL 32953

Call: 800.251.8993
321.868.3016
Fax: 321.868.3703
Email: techassistance@arnottinc.com

Arnott Europe Business Office:

www.arnotteurope.com

Docterskampstraat 1E/1F, 3
5222 AM 's-Hertogenbosch (NL)

NL Phone: +31 73 7850 580
DE Phone: +31 85 2087 438
UK Phone: +44 203 3186 124
BE Phone: +32 258 846 90
ES Phone: +34 91 901 10 56
FR Phone: +32 78 48 46 93
Email: info@arnotteurope.com

Exceptional Ride Comfort

Easy Installation

Designed for Motorcycles

TruAIR® Technology

Rest Flat-Footed

Reduced Painful Bottoming

Rigorously Tested

Prevent Dangerous Tire Wear

Prevent Extra Drivetrain Stress

Global, Multilingual Tech Support