

P-2134 WP WABCO OES AIR SUSPENSION COMPRESSOR AUDI A6, A6 ALLROAD QUATTRO CHASSIS: C5

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.



WARNING: *The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard hand, ear, and eye protection when servicing the air suspension system.*

GENERAL INFORMATION:

- Not to be stored below 5°F (-15°C) or above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: *Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.*



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

AIR SUSPENSION COMPRESSOR REMOVAL

1. The compressor is located in front of the spare tire well underneath the vehicle. (FIGURE A)



FIGURE A

2. Remove the protective cover from the underside of the compressor via the three mounting studs. (FIGURE B)



FIGURE B

3. With the three (3) nuts removed, remove the cover to expose the compressor. (FIGURE C)



FIGURE C

4. The compressor is held on with three (3) nuts, one on each isolator. Isolators will be reused on the new assembly. (FIGURE D)



FIGURE D

5. Disconnect the three (3) electrical plugs, air line and intake air hose from the compressor. One plug is on the solenoid while the other two are positioned to the right. Remove the air line fitting from the air hose and discard. (FIGURE E)



FIGURE E

6. Remove the old compressor from the vehicle. (FIGURE F)



FIGURE F

7. Remove the air line fitting from the air hose and discard. To remove the air line fitting, remove the collet and the remaining fitting will slide off of air hose. (FIGURE G)

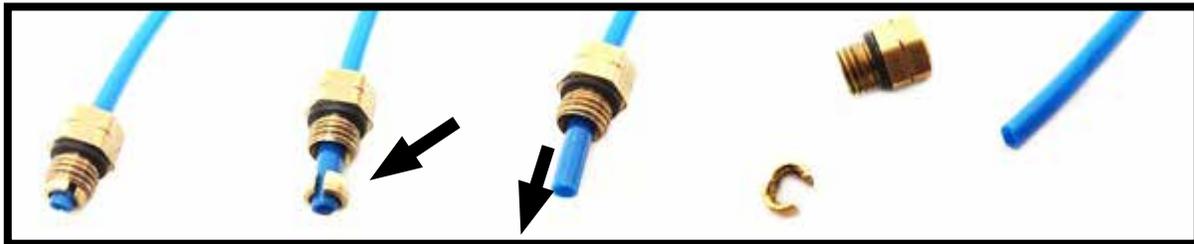


FIGURE G

AIR SUSPENSION COMPRESSOR INSTALLATION

-  *Tighten all nuts and bolts to manufacturer's specifications during the installation process.*
-  *Do not remove the air fitting from the air suspension compressor. Doing so may cause damage and/or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully seated.*

1. INSTALLATION IS IN THE REVERSE ORDER OF AIR COMPRESSOR REMOVAL.